Autonics INDUCTIVE PROXIMITY SENSOR **LONG DISTANCE CYLINDRICAL TYPE DC 3-WIRE** INSTRUCTION MANUAL

Thank you for choosing our Autonics product. Please read the following safety considerations before use.

Safety Considerations

**Please observe all safety considerations for safe and proper product operation to avoid hazards.

★★ symbol represents caution due to special circumstances in which hazards may occur.

▲Warning Failure to follow these instructions may result in serious injury or death

Caution Failure to follow these instructions may result in personal injury or product damage.

⚠ Warning

- 1. Fail-safe device must be installed when using the unit with machinery that may cause serious injury or substantial economic loss. (e.g. nuclear power control, medical equipment, ships, vehicles, railways, aircraft, combustio equipment, crime/disaster prevention devices, etc.)

 Failure to follow this instruction may result in personal injury, fire or economic loss.
- 2. Do not use the unit in the place where flammable/explosive/corrosive gas, high humidity, direct sunlight, radiant heat, vibration, impact, or salinity may be present.

 Failure to follow this instruction may result in explosion or fire.

- 3. Do not disassemble or modify the unit.
 Failure to follow this instruction may result in fire.

 4. Do not connect, repair, or inspect the unit while connected to a power source.
- Failure to follow this instruction may result in fire
- 5. Check 'Connections' before wiring.


 Failure to follow this instruction may result in fire

⚠ Caution


- 1. Use the unit within the rated specifications.
- Failure to follow this instruction may result in fire or product damage.

 2. Use dry cloth to clean the unit, and do not use water or organic solvent.
- Failure to follow this instruction may result in fire
- 3. Do not supply power without load.
 Failure to follow this instruction may result in fire or product damage.

Ordering Information

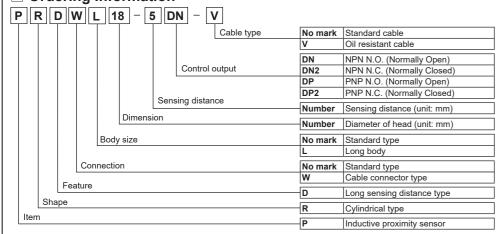

Control Output Diagram & Load Operating

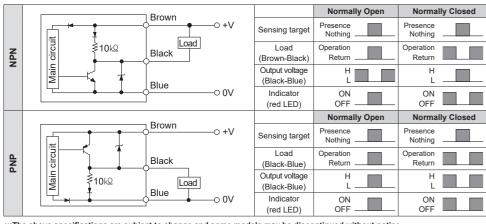

«The above specifications are subject to change and some models may be discontinued without notice. XBe sure to follow cautions written in the instruction manual and the technical descriptions (catalog, homepage)

Specifications

Model	P.P. P.P. P.P. P.P.P.P.P.P.P.P.P.P.P.P.	RR012-4DN RR012-4DP RR012-4DN2 RR012-4DN2 RR0112-4DN RR0112-4DP RR0112-4DP2 RR0W12-4DP2 RR0W12-4DP RR0W12-4DP RR0W12-4DP RR0W12-4DP RR0W12-4DP RR0W12-4DN RR0W12-4DN RR0W12-4DN RR0W12-4DN RR0W12-4DN RR0W12-4DN RR0W12-4DP2 RR0W12-4DP2 RR0W12-4DP2 RR0W12-4DP4	PRD12-8DN PRD12-8DP PRD12-8DN2 PRD12-8DN2 PRD12-8DP2 PRD12-8DP PRD12-8DP2 PRDW12-8DN PRDW12-8DN PRDW12-8DN2 PRDW12-8DP2 PRDW12-8DP2 PRDW12-8DP2 PRDW12-8DP2 PRDW12-8DP2 PRDW12-8DP2 PRDW12-8DP2 PRDW12-8DP2 PRDW12-8DP2 PRDW12-8DP2 PRDW12-8DP2 PRDW12-8DP2 PRDW12-8DP2 PRDW12-8DP2 PRDW12-8DP-V	PRD18-7DP PRD18-7DP PRD18-7DP2 PRD18-7DP2 PRD118-7DP2 PRD118-7DP PRD118-7DP PRD118-7DP2 PRDW18-7DN PRDW18-7DN PRDW18-7DP2 PRDW18-7DP2 PRDW18-7DP2 PRDW118-7DP2 PRDW118-7DP2 PRDW118-7DP2 PRDW118-7DP2 PRDW118-7DP2 PRDW118-7DP2 PRDW118-7DP2 PRDW118-7DP2 PRDW118-7DP2 PRDW118-7DP-V	PRD18-14DN PRD18-14DP PRD18-14DP2 PRD18-14DP2 PRD18-14DP PRD118-14DP PRD118-14DP PRD118-14DP2 PRDW18-14DN PRDW18-14DN PRDW18-14DP PRDW18-14DP PRDW18-14DP PRDW18-14DP PRDW18-14DP PRDW18-14DP PRDW18-14DP PRDW18-14DP PRDW18-14DP PRDW18-14DP2 PRDW18-14DP2 PRDW18-14DP2 PRDW18-14DP2 PRDW18-14DP2 PRDW18-14DP-V	PRD30-15DN PRD30-15DP PRD30-15DP2 PRD30-15DP2 PRDL30-15DN2 PRDL30-15DN2 PRDU30-15DN2 PRDW30-15DN2 PRDW30-15DN2 PRDW30-15DN2 PRDW30-15DN2 PRDW30-15DN2 PRDW30-15DN2 PRDW30-15DN2 PRDW30-15DP2 PRDW30-15DP2 PRDW30-15DP2 PRDW30-15DP2 PRDW30-15DP2 PRDW30-15DP-V PRDW30-15DP-V	PRD30-25DN PRD30-25DP PRD30-25DN2 PRD30-25DN2 PRDL30-25DN2 PRDL30-25DP PRDL30-25DN2 PRDW30-25DP PRDW30-25DP PRDW30-25DP PRDW30-25DP PRDW30-25DP PRDW30-25DP PRDW30-25DP2 PRDW130-25DP PRDW130-25DP2 PRDW130-25DP2 PRDW130-25DN2 PRDW130-25DN2 PRDW130-25DN2 PRDW130-25DN-V PRDW30-25DP-V		
Diameter of sensing side		2mm 18mm			30mm				
Sensing distance	e 4	mm	8mm	7mm	14mm	15mm	25mm		
Installation	S	Shield (flush)	Non-Shield (non-flush)	Shield (flush)	Non-Shield (non-flush)	Shield (flush)	Non-Shield (non-flush)		
Hysteresis	N	Max. 10% of sensing distance							
Standard sensing ta	arget 1:	2×12×1mm (iron)	25×25×1mm (iron)	20×20×1mm (iron)	40×40×1mm (iron)	45×45×1mm (iron)	75×75×1mm (iron)		
Setting distance	0	to 2.8mm	0 to 5.6mm	0 to 4.9mm	0 to 9.8mm	0 to 10.5mm	0 to 17.5mm		
Power supply (operating voltage Current consump	perating voltage) (10-30VDC)								
Response freque		600Hz	400Hz	300Hz	200Hz	100Hz	100Hz		
Residual voltage		Max. 1.5V							
Affection by Ten	np. V	Within ±10°C max. of sensing distance at 20°C in temperature range of -25 to 70°C							
Control output		Max. 200mA							
Insulation resistance		Min. 50Iki (500VDC megger)							
Dielectric streng		1,500VAC 50/60Hz for 1minute							
Vibration			equency of 10 to 55H		ctions for 2 hours				
Shock		500m/s² (approx. 50G) in each X, Y, Z directions for 3 times							
Indicator		Operating indicator (red LED)							
Environ- Ambient	temp2	-25 to 70°C, storage: -30 to 80°C							
ment Ambient	humi. 3	35 to 95%RH, storage: 35 to 95%RH							
Protection circuit		Surge protection, reverse polarity proteciton, output short over current protection circuit							
Protection		P67 (IEC Standard)							
Cable type		Ø4mm, 3-wire, 2m Ø5mm, 3-wire, 2m							
Cable Cable type	A	AWG22, core diameter: 0.08mm, number of cores: 60, insulator diameter: Ø1.25mm							

 Approx. 80g
 Approx. 75g

 Approx. 110g
 Approx. 105g

 Approx. 140g
 Approx. 145g

 Approx. 180g
 Approx. 185g
 Approx. 62g **S1: The response frequency is the average value. The standard sensing target is used and the width is set as 2 times of the standard sensing target, 1/2 of the sensing distance for the distance.

**S2: Do not pull the Ø4mm cable with a tensile strength of 30N or over and the Ø5mm cable with a tensile strength of 50N or over. It may result in fire due to the broken wire. When extending wire, use AWG22 cable or over within 200m.

**Environment resistance is rated at no freezing or condensation.

Approx. 145g

Case/Nut: Nikel plated Brass, Washer: Nikel plated Iron, Sensing surface: Polybutylene terephthalate, Standard cable (black): Polyvinyl chloride (PVC), Oil resistant cable (gray): Oil resistant Polyvinyl chloride (PVC)

 Approx. 115g
 Approx. 110g
 Approx. 175g
 Approx. 180g

represents PRD(W)12 model. Dimension can be diff

M12×1

M12×1

Н

G

43.5

43.5

43.5

43.5

43.5

43.5

43.5

43.5

43.5

43.5

2 1 Brown

3 4 Black

Approx. 215g

Approx. 220g

(unit: mm)

erent by mode

Nut & Washer

Approx. 140g

Cable connector type

PRDW,PRDWL (M12, M18, M30)

Ø4mm, 3-wire, 300mm, M12 connector Ø5mm, 3-wire, 300mm, M12 connector

AWG22, core diameter: 0.08mm, number of cores: 60, insulator diameter: Ø1.25mm

Cable type

PRD,PRDL (M12, M18, M30)

Α

PRDWL M18×1
PRD M30×1.5
PRDW M30×1.5

M12 PRDW M12×1
PRDL M12×1

M18 PRDW PRDL

Connections

M12×1

PRDWL M12×1 64.4

M18×1 85 M30×1.5 63

2 1 Brown

3 4 Black

Approx. 74g

Approx. 94g

Cable connector

PRDL

PRDWI

Type

Flush

flush

flush

Connector

M12

M30

Dimensions

Approx. 72g

Approx. 92g

Approx. 42g

В

С

---o+V


Load


D

Е

Mutual-interference & Influence by Surrounding Metals

When several proximity sensors are mounted closely, malfunction of sensor may be caused due to mutual interference. Therefore, be sure to provide a minimum distance between the two sensors with referring to the chart below

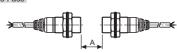

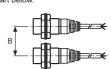


OInfluence by surrounding metals

When sensors are mounted on metallic panel, it is required to protect the sensors from being affected by any metallic object except target






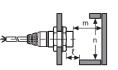

Model	PRDU12-4DU PRDWU12-4DU					PRD_30-25D_ PRDW_30-25D_
Α	25	120	50	200	110	350
В	25	100	35	110	90	300
ł	2.5	15	3.5	14	6	20
Ød	18	40	27	70	45	120
m	12	20	24	40	45	90
n	18	40	27	70	45	120

Setting Distance

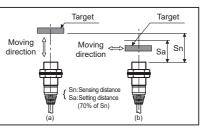

Sensing distance can be changed by the shape, size or material of the target Therefore please check the sensing distance like (a), then pass the target within range of setting distance(Sa)

• Setting distance(Sa) = Sensing distance(Sn) × 70%

E.g.)PRD18-7DN

Setting distance(Sa) = 7mm × 0.7 = 4.9mm

Installation and Tightening Torque


When tightening the nut, use the provided washer as [Figure 1]. When installing the product, the tightening torque of the nut varies according to the distance from the fore-end.


The front part of the product is from the fore-end to the dimension on the below table, and the rear part is from the tip of the nut to the end of the product. [Figure 2] In case the nut is placed in the front part of the product, apply

tightening torque for front part.

[Table 1] the allowable tightening torque table is for inserting the washer as [Figure 3].

[
	Strength		Front	Rear	
Model		Size	Torque	Torque	
PRD12 Series	Flush	13mm	6.37N·m	11.76N·m	
	Non-flush	7mm	0.3714-111		
PRD18 Series	Flush	-	14.7N·m		
	Non-flush	-			
PRD30 Series	Flush	26mm	49N·m	78.4N·m	
	Non-flush	12mm	4911.111		

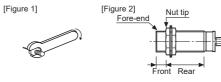

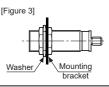

Cautions during Use

- Follow instructions in 'Cautions during Use'. Otherwise, it may cause unexpected accidents.
 12-24VDC power supply should be insulated and limited voltage/current or Class 2, SELV power supply device
- Use the product, after 0.8 sec of supplying power.
- 4. Wire as short as possible and keep away from high voltage lines or power lines, to prevent surge and inductive noise
- Do not use near the equipment which generates strong magnetic force or high frequency noise (transceiver, etc.). In case installing the product near the equipment which generates strong surge (motor, welding machine, etc.), use diode or varistor to remove surge.

Graphic/Logic Panels

■ Laser Welding/Cutting System

■ Laser Marking System(Fiber, CO₂, Nd:YAG)

- 5. This unit may be used in the following environments.
- 1 Indoors (in the environment condition rated in 'Specifications') 3 Pollution degree 2

② Altitude max. 2,000m 4 Installation category I

Major Products

■ Photoelectric Sensors ■ Temperature Controllers ■ Fiber Optic Sensors ■ Temperature/Humidity Transducers ■ Field Network Devices SSRs/Power Controllers

■ Door Side Sensors ■ Counters Area Sensors Timers

■ Proximity Sensors ■ Panel Meters ■ Pressure Sensors ■ Tachometers/Pulse(Rate) Meters ■ Rotary Encoders ■ Display Units

■ Connectors/Sockets ■ Sensor Controller

■ Switching Mode Power Supplies

Control Switches/Lamps/Buzzers

I/O Terminal Blocks & Cables ■ Stepper Motors/Drivers/Motion Controllers

Autonics Corporation

DRW171509AB